



BSF Standard/Air/Manual


CHANGE BLADE HOUSING

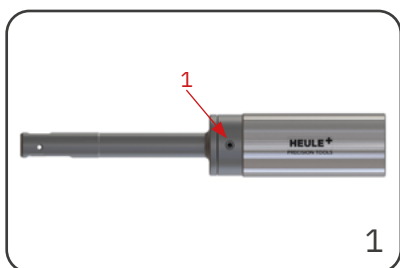


Loosen the three stop screws **(1)**.

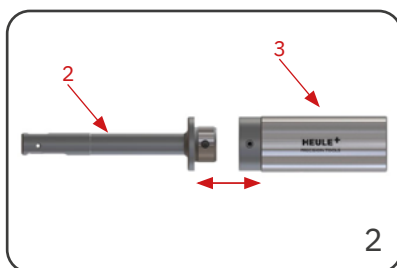

Pull the blade housing **(2)** out of the shank **(3)**.

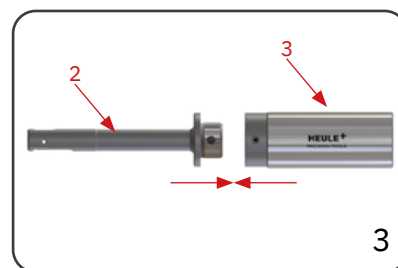

Insert the new blade housing **(2)** into the shank **(3)**. Make sure that all the contact surfaces are clean.

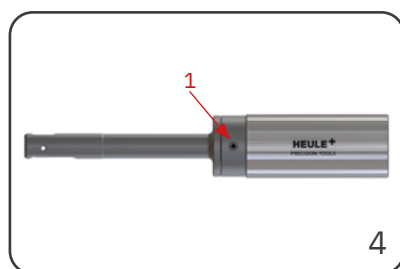

Tighten the three stop screws **(1)**.



These instructions apply to all three activation methods:
BSF Standard **(4)**
BSF Air **(5)**
BSF Manual **(6)**