


Application tolerances

Bore-Ø Tolerance	$\begin{matrix} +0.1 \\ 0 \end{matrix}$ mm	$\begin{matrix} +0.2 \\ 0 \end{matrix}$ mm
Counterbore-Ø Tolerance	± 0.2 mm	± 0.3 mm

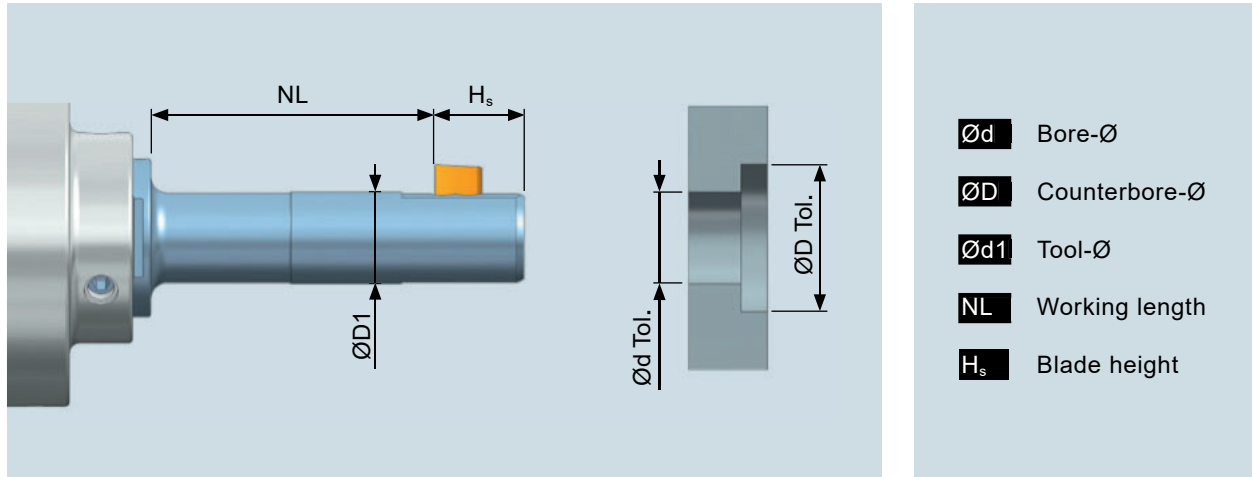

NOTE

Please observe the recommended value for the tolerance of the bore diameter (d). The larger the tolerance is chosen, the more side effects can occur (damaged bore, enlargening, counterbore-Ø gets smaller).